## N. Packer Inflation Calculation S\_set

Note: for packers above the stainless steel DTW, subtract the packer depth instead of the stainless steel DTW.

capacity. The stainless steel DTW is subtracted because that is the surplus head acting on the tool to inflate the packer which is not balanced by head outside the casing. 100 psi is

added to provide a positive flow into the packer.